

**ASSEMBLY INSTRUCTION
MODEL: DC 2135**

Please read instruction carefully


Remove all wrapping materials, staples and packing straps from the carton. Refer to part and hardware list table to ensure they are complete before start assemble. Place all wooden parts on clean, flats and soft surface (e.g carpet or rug) to prevent parts from being scratched.

Cautions:

1. Do not fully tighten bolts and nut until all parts have been assembled.
2. Do not over-tighten bolts and nuts as it may damage the screw thread.
3. Keep all hardware parts out of reach of children.

PART LIST		
NO	DESCRIPTION	QTY
1	CHAIR BACK	2 PCS
2	U RAIL	2 PCS
3	FRONT FRAME	2 PCS
4	CUSHION SEAT	2 PCS
5	DOWN RAIL	2 PCS

HARDWARE LIST		
NO	DESCRIPTION	QTY
A	JCBC M6x45MM	6 PCS
B	CSK M4x30MM	7 PCS
C	SPRING WASHER	6 PCS
D	FLAT WASHER	4 PCS
E	WOOD DOWEL M8x30MM	4 PCS
F	ALLEN KEY M4	1 PCS

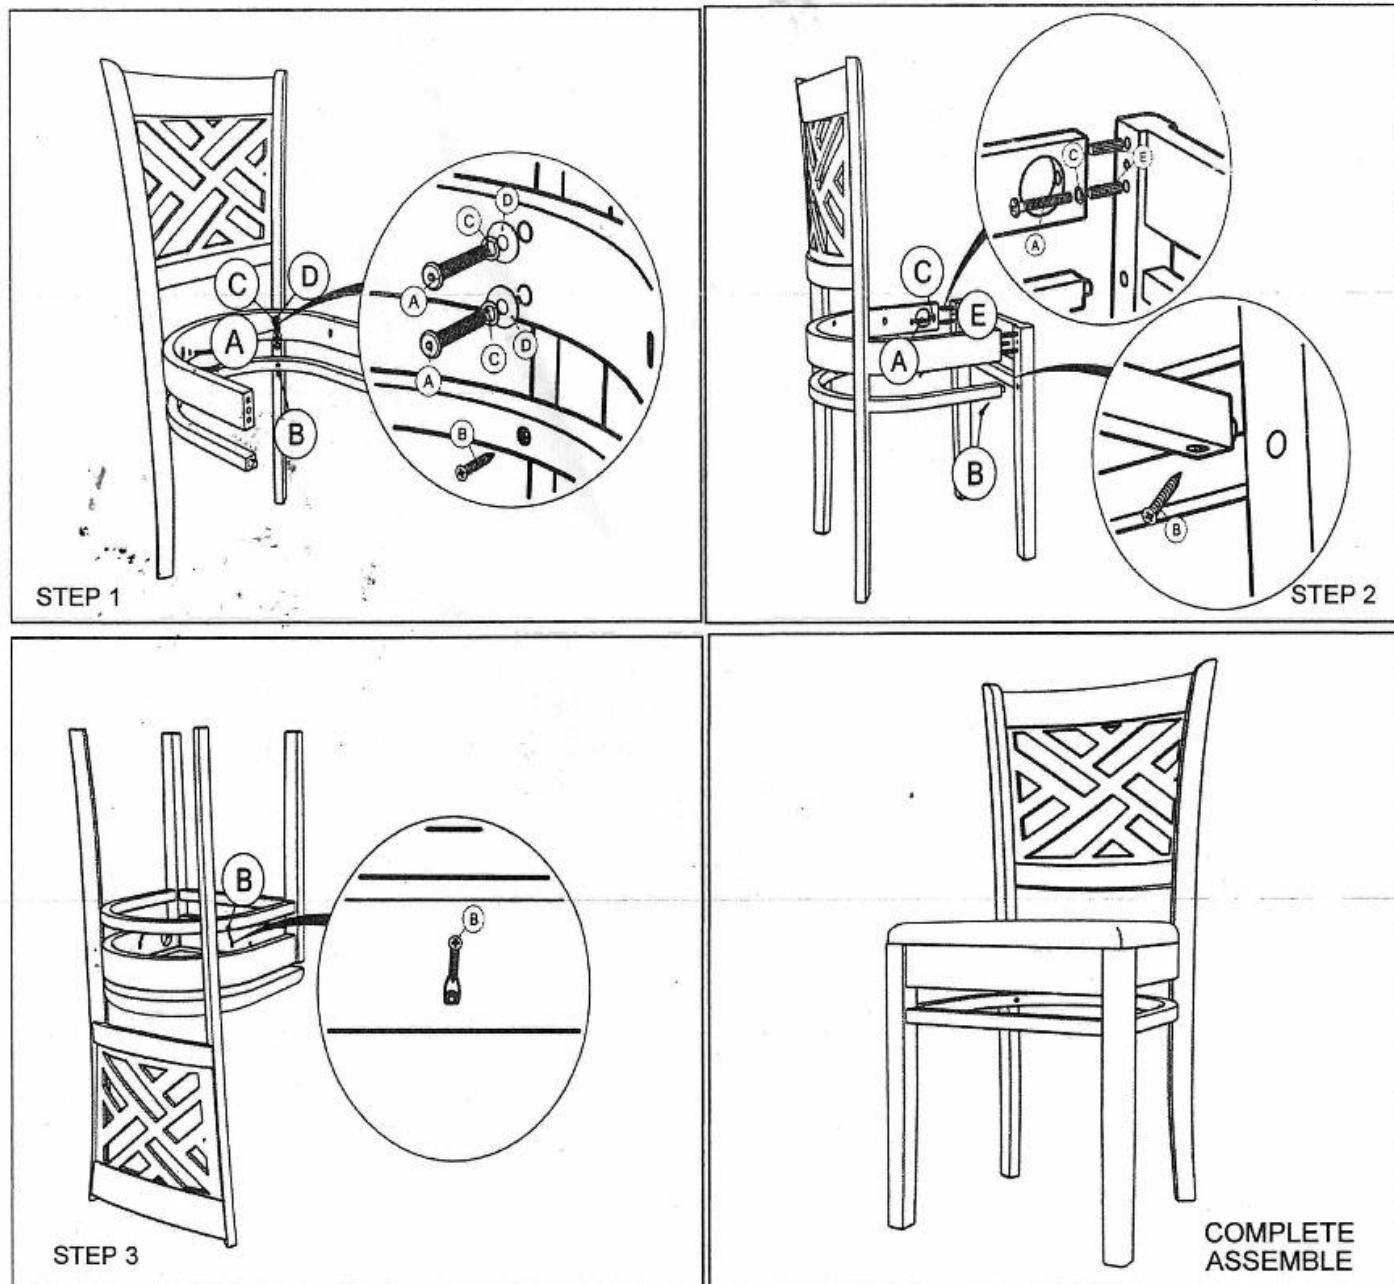

MODEL: DT 914

ASSEMBLY INSTRUCTIONS




Thanks you for purchasing this quality product. Be sure to lay all components on a soft and clean surface before assembly in order to avoid components from being scratched.

CAUTIONS:

1. Check contents against list for quantity.
2. Familiarize yourself with the components and hardware by reviewing the assembly instructions.
3. Do not over tightened the screw and bolts as it may damage the threads.
4. Keep all hardware parts out of the reach of children.

COMPONENTS LIST		
No.	Description	Qty
A	TOP TABLE	1
B	TABLE LEG	4
C	APRON	1
D	SUPPORT TOP	2

HARDWARE LIST		
No.	Description	Qty
A	JCBC M6x40MM	12 PCS
B	CSK M4x30MM	8 PCS
C	ADJUSTABLE	4 PCS
D	SPRING WASHER	8 PCS
E	FLAT WASHER	8 PCS
F	ALLEN KEY M4	1 PCS

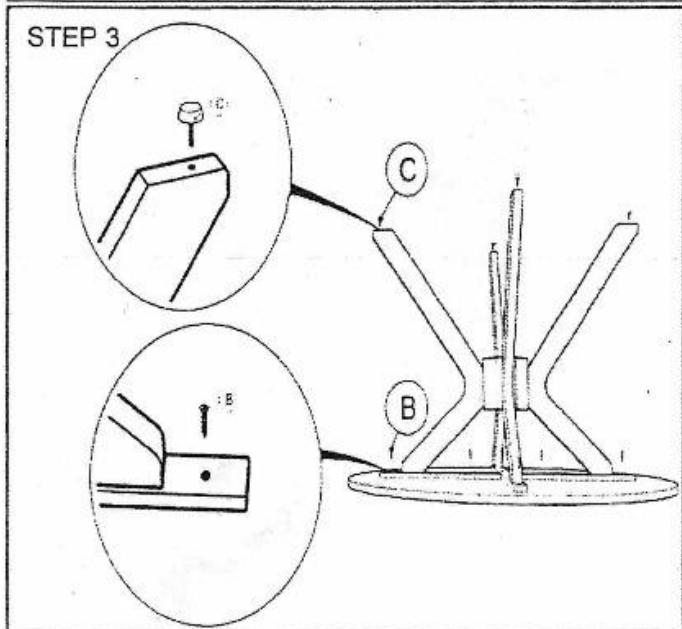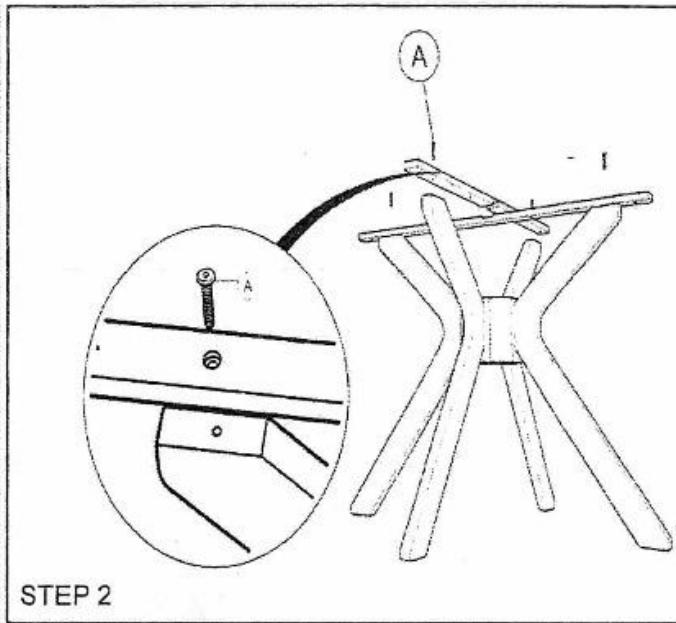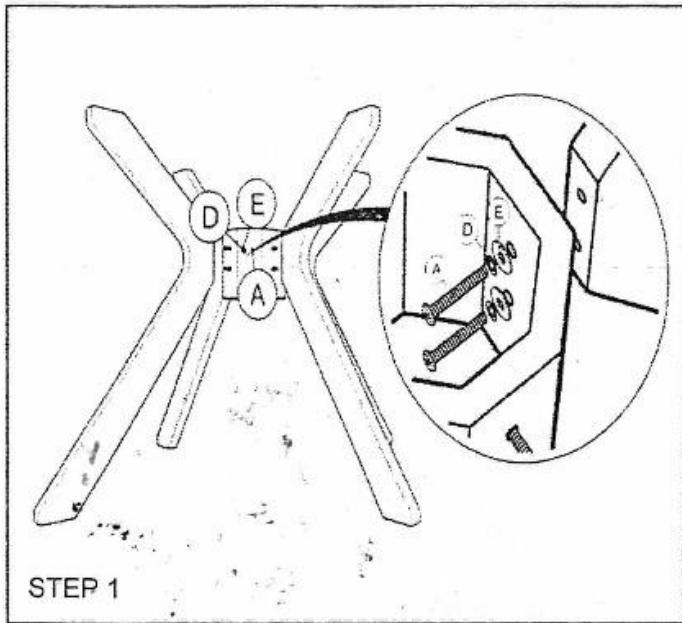

COMPLETE
ASSEMBLE