

# MODEL: DT 853 DINING TABLE

## ASSEMBLY INSTRUCTIONS



Thanks you for purchasing this quality product. Be sure to lay all components on a soft and clean surface before assembly in order to avoid components from being scratched.

### CAUTIONS:

1. Check contents against list for quantity.
2. Familiarize yourself with the components and hardware by reviewing the assembly instructions.
3. Do not over tightened the screw and bolts as it may damage the threads.
4. Keep all hardware parts out of the reach of children.

COMPONENTS LIST		
No.	Description	Qty
A.	TOP PANEL	1
B.	PEDESTAL	1
C.	LEG	4
D.	SUPPORT TOP	2

HARDWARE LIST		
No.	Description	Qty
E.	JCBCW M6x40	4
F.	CSK SCREW 32MM	8
G.	ALLEN KEY M4	1
H.	SPANNER 12.8MM	1
I.	HEX NUT	4
J.	FLAT WASHER	4
K.	BASE GLIDER(AJUSTER)	4

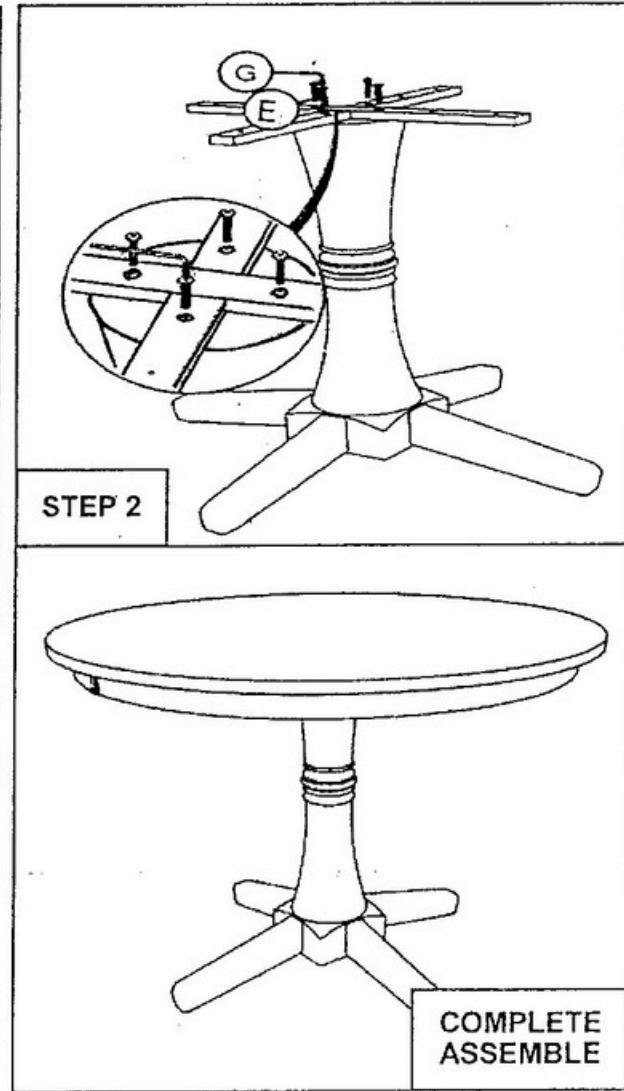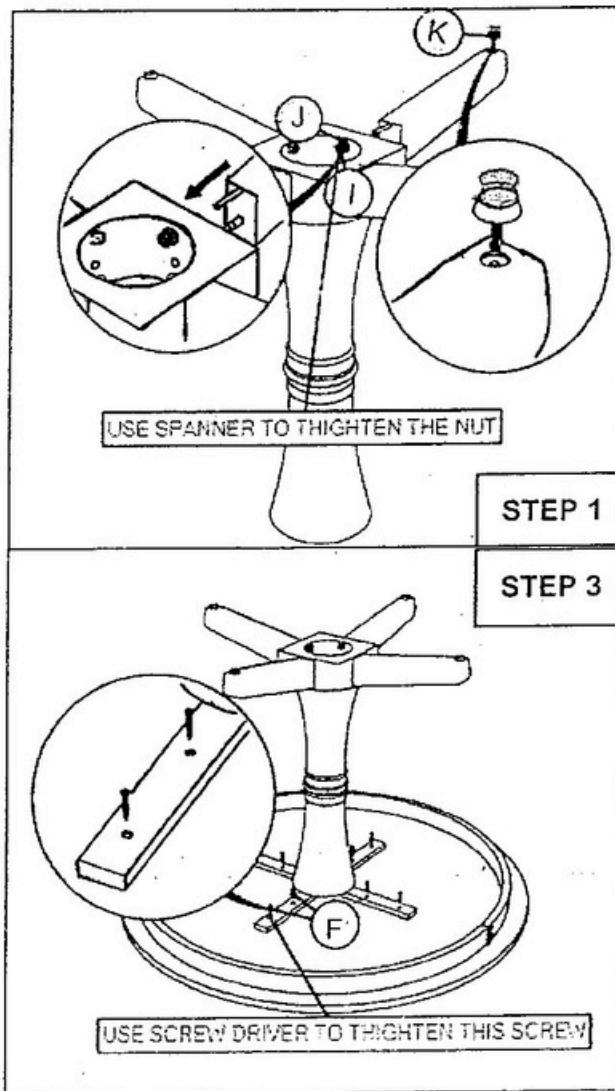

## ASSEMBLY INSTRUCTION - MODEL: DC 2312

Please read instruction carefully


Remove all wrapping materials, staples and packing straps from the carton. Refer to part and hardware list table to ensure they are complete before start assemble. Place all wooden parts on clean, flats and soft surface (e.g. carpet or rug) to prevent parts from being scratched.

Cautions:

1. Do not fully tighten bolts and nut until all parts have been assembled.
2. Do not over-tighten bolts and nuts as it may damage the screw thread.
3. Keep all hardware parts out of reach of children.

PART LIST		
NO	COMPONENT	QTY
1.	BACK LEG	4
2.	BACK STAND	2
3.	BACK STAND STEEL	2
3.	FRONT LEG	4
4.	CUSHION SEAT	2

HARDWARE LIST		
NO	DESCRIPTION	QTY
A.	JCBC M6x70MM	8 PCS
B.	JCBC M6x45MM	4 PCS
C.	JCBC M6x80MM	8 PCS
D.	JCBC M6x10MM	2 PCS
E.	SPRING WASHER M6x13MM	24 PCS
F.	FLAT WASHER M6x19MM	28 PCS
G.	JCBC M6x20MM	4 PCS
H.	HEX NUT M6	2 PCS
I.	ALLEN KEY M4	1 PCS
J.	CSK SCREW M4x32MM	8 PCS

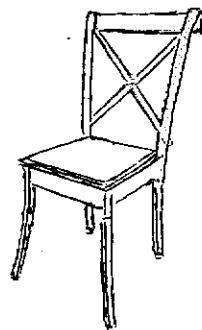

COMPLETE ASSEMBLE

