MODEL: DC 2416

Please read instruction carefully


Remove all wrapping materials, staples and packing straps from the carton. Refer to part and hardware list table to ensure they are complete before start assemble. Place all wooden parts on clean, flats and soft surface (e.g carpet or rug) to prevent parts from being scratched.

Cautions:


1. Do not fully tighten bolts and nut until all parts have been assembled.
2. Do not over-tighten bolts and nuts as it may damage the screw thread.
3. Keep all hardware parts out of reach of children.

PART LIST		
NO	DESCRIPTION	QTY
1	CHAIR BACK	2 PCS
2	U RAIL	2 PCS
3	FRONT FRAME	2 PCS
4	CUSHION SEAT	2 PCS
5	DOWN RAIL	2 PCS


HARDWARE LIST		
NO	DESCRIPTION	QTY
A	JCBC M6x45MM	6 PCS
B	CSK M4x30MM	7 PCS
C	SPRING WASHER	6 PCS
D	FLAT WASHER	4 PCS
E	WOOD DOWEL M8x30MM	4 PCS
F	ALLEN KEY M4	1 PCS

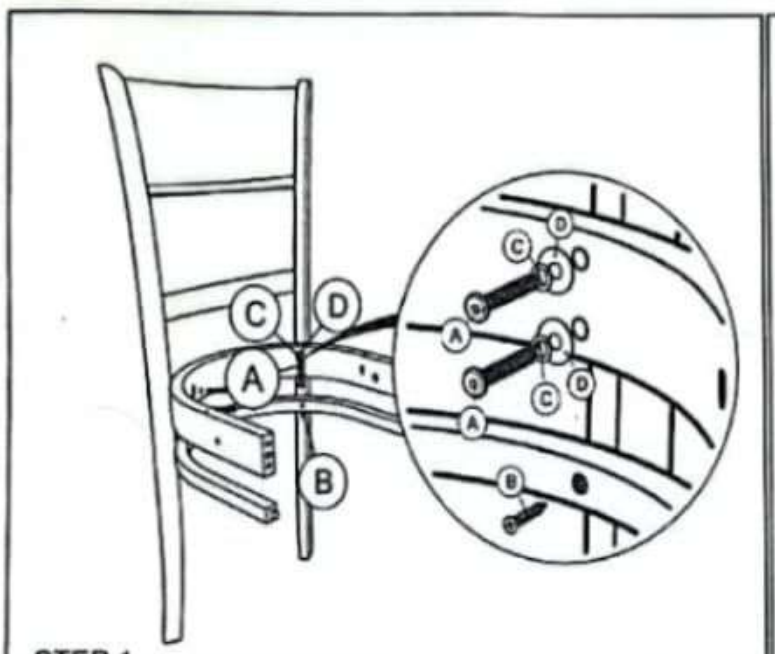

STEP 1

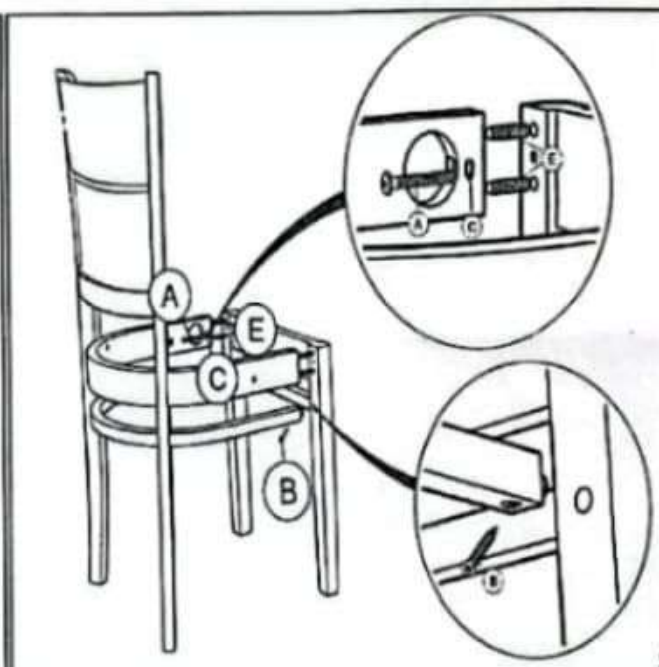

STEP

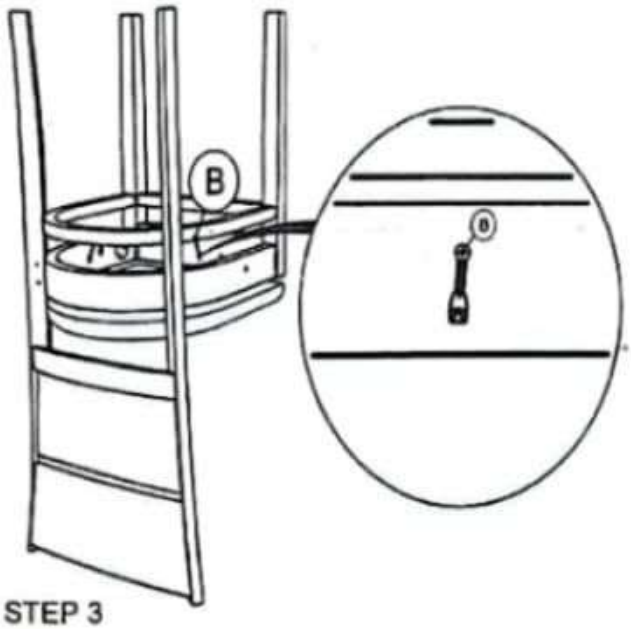

STEP 3



COMPLETE ASSEMBLE