

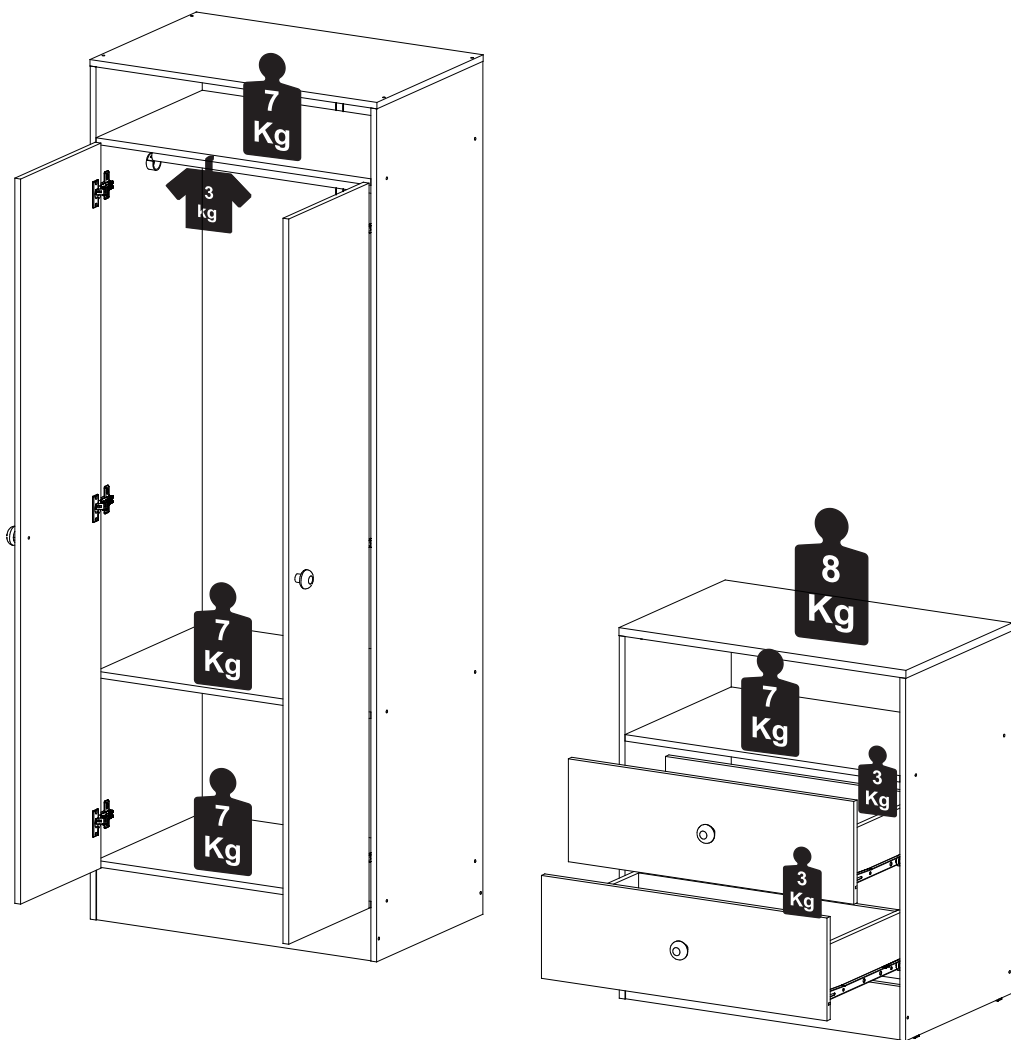
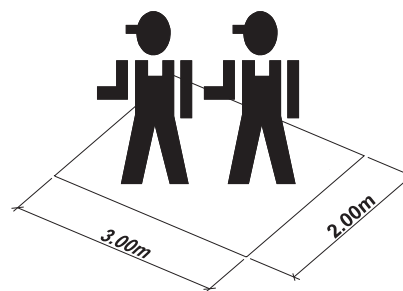


**PESO DISTRIBUIDO
DE MANEIRA
UNIFORME** **PESO DISTRIBUIDO
DE MANERA
UNIFORME** **DISTRIBUTED
WEIGHT SO
UNIFORM**

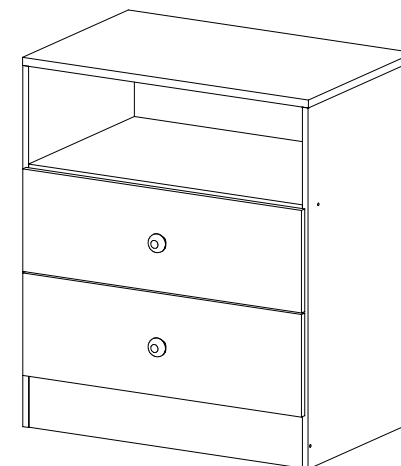


**INSTRUÇÕES DE MONTAGEM
INSTRUCCIONES DE ARMADO
ASSEMBLY INSTRUCTIONS**

REF.: MP4046







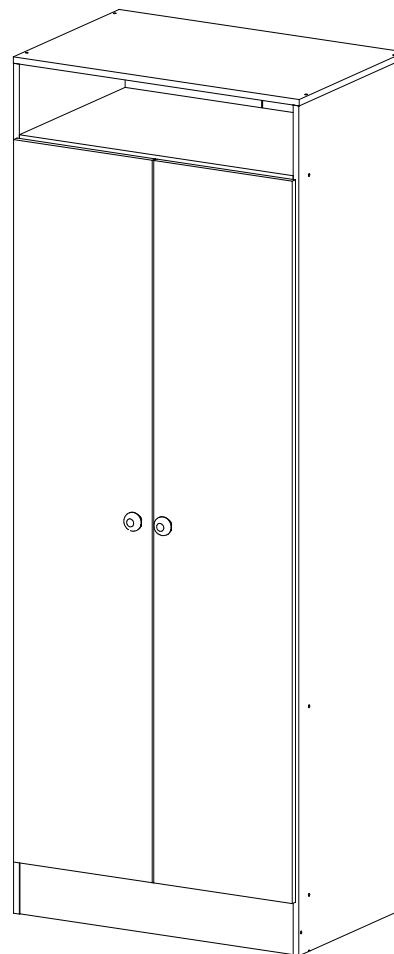


**FERRAMENTAS NECESSÁRIAS
HERRAMIENTAS NECESARIAS
TOOLS NECESSARY**

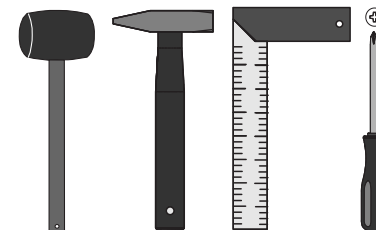

MULTIMÓVEIS

Rua Beatriz Dall'Onder, 266 • Distrito Industrial • CEP: 95706-350
Bento Gonçalves/RS • Brasil • Tel. +55 54 2102 4000
www.multimoveis.com • multimoveis@multimoveis.com
f multimoveisbr i multimoveis_br y multimoveis_br


A		Tampa Adesiva Papel	32
AA		Dobradiça caneco 26mm	06
AB		Distanciador dobradiça	06
AG		Cavilha 6,0 x 30	20
AT		Cantoneira Plástica 18 x 18	08
B		Paraf. 4,0 x 40	28
BW		Paraf. 4,0 x 30	04
BX		Bisnaga de Cola 5gr	01
BZ		Sapata L p/ 12mm	08
CA		Corrediça 300mm	02
CC		Paraf. 3,5 x 12	24
D		Paraf. 3,5 x 35	08
F		Paraf. 3,5 x 10	02
O		Suporte Cabideiro	02
P		Paraf Cab Peg. 3,5 x 12	47
PX		Puxador	04
R		Paraf. 4,0 x 20	04
Y		Prego 10 x 10	60

Utilizar a régua abaixo para medir as ferragens:


Utilizar la regla abajo para medir los herrajes: Use the ruler below to measure the hardware:






Passo
Paso
Step
08

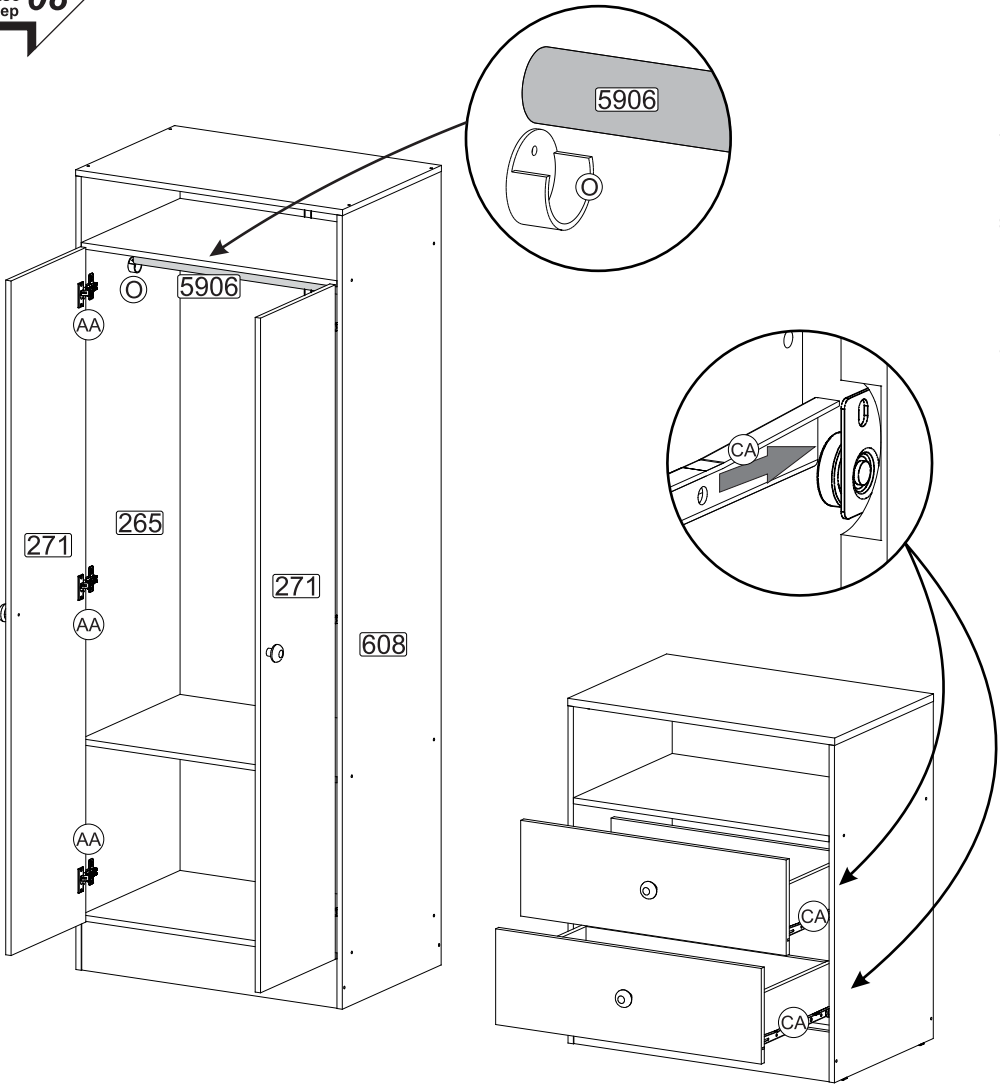

REGULAGEM DAS PORTAS/AJUSTE DE PUERTAS/DOORS ADJUSTMENT

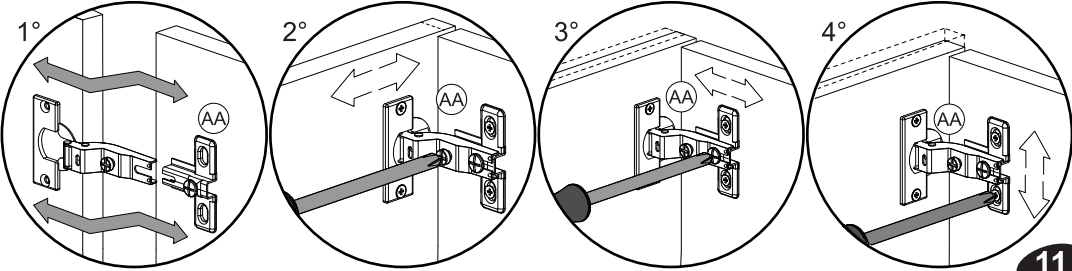

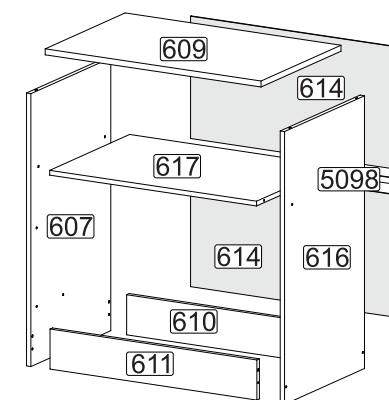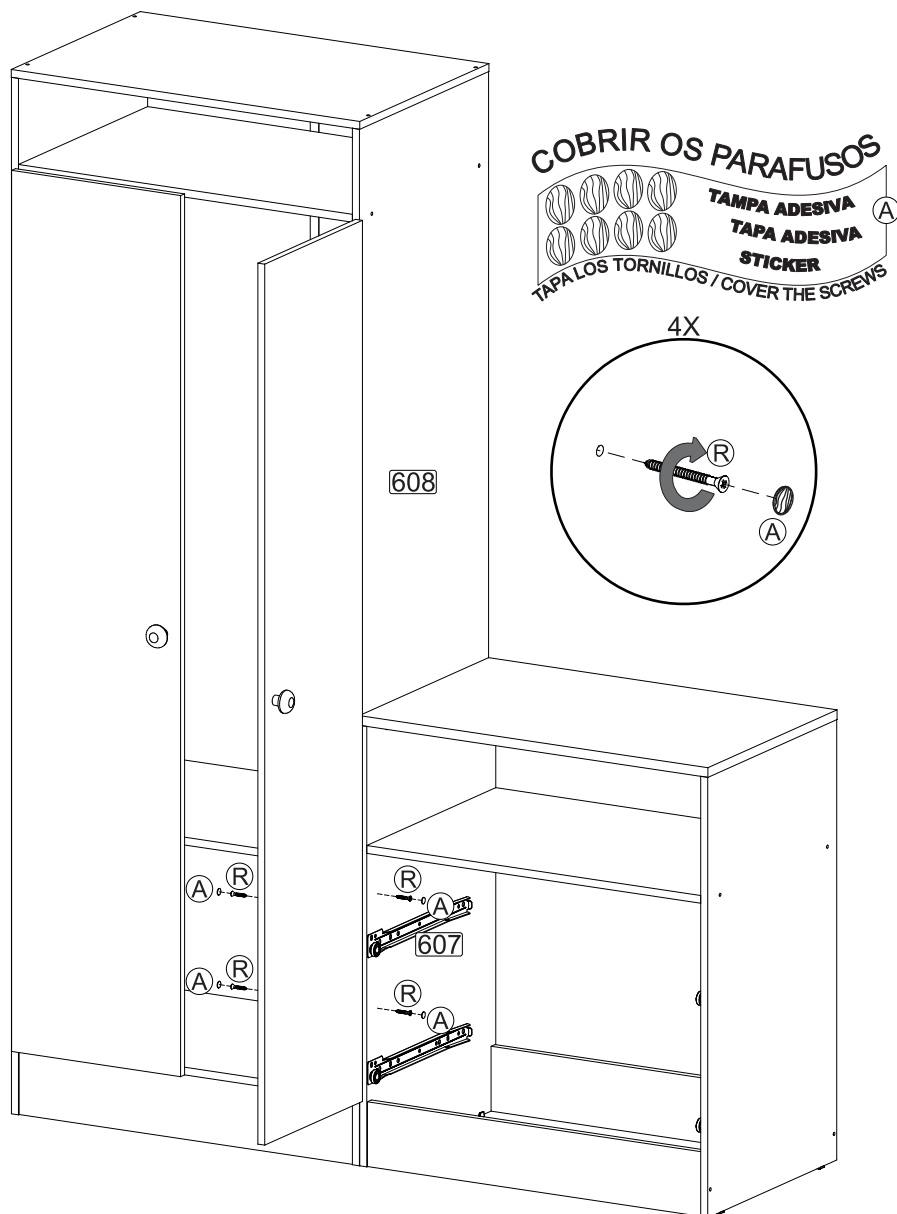

 LISTA DE PEÇAS	 LISTA DE PIEZAS	 PART LIST	MEDIDAS (mm)
Nº DENOMINAÇÃO	Nº DENOMINACIÓN	Nº DESCRIPTION	
264 - TAMPO	264 - TAPA	264 - TOP	600X385X12
265 - LATERAL ESQUERDA	265 - LATERAL IZQUIERDA	265 - LEFT SIDE	1600X385X12
266 - BASE / PRATELEIRA	266 - BASE / ESTANTE	266 - BASE / SHELF	575X385X12
271 - PORTA	271 - PUERTA	271 - DOOR	1360X291X12
276 - PRATELEIRA SUPERIOR	276 - ESTANTE SUPERIOR	276 - UPPER SHELF	575X385X12
277 - COSTA MAIOR	277 - RESPALDO MAYOR	277 - LARGER BACK	1508X295X3
495 - LATERAL DE GAVETA	495 - LATERAL CAJÓN	495 - DRAWER SIDE	300X100X12
607 - LATERAL ESQUERDA CÔMODA	607 - LATERAL IZQUIERDO CÔMODA	607 - LEFT SIDE DRESSER	680X385X12
608 - LATERAL DIREITA	608 - LATERAL DERECHA	608 - RIGHT SIDE	1600X385X12
609 - TAMPO GAVETA	609 - TAPA CAJÓN	609 - DRAWER TOP	600X385X15
610 - RODAPÉ TRASEIRO	610 - ZÓCALO POSTERIOR	610 - BACK SKIRTING BOARD	575X100X12
611 - RODAPÉ FRONTAL	611 - ZÓCALO FRONTAL	611 - FRONT SKIRTING BOARD	575X100X12
612 - FRENTE DE GAVETA	612 - FRENTE CAJÓN	612 - FRONT DRAWER	585X193X12
613 - COSTA DE GAVETA	613 - RESPALDO CAJÓN	613 - DRAWER BACK	525X100X12
614 - COSTA MENOR	614 - RESPALDO MENOR	614 - SMALLER BACK	591X305X3
615 - FUNDO DE GAVETA	615 - FONDO CAJÓN	615 - BOTTOM DRAWER	547X305X3
616 - LATERAL DIREITA CÔMODA	616 - LATERAL DERECHO CÔMODA	616 - RIGHT SIDE DRESSER	680X385X12
617 - PRATELEIRA CÔMODA	617 - ESTANTE COMODO	617 - COMMODE SHELF	575X385X12
5098 - PERFIL "I"	5098 - PERFIL "I"	5098 - PROFILE	590MM
5906 - CABIDEIRO	5906 - PERCHA	5906 - HANGER	564MM Ø23
7011 - PERFIL "I"	7011 - PERFIL "I"	7011 - PROFILE	1508MM

PRÉ-MONTAGEM / PRÉ-ARMADO / PRÉ-ASSEMBLAGE

2X

6X

4X

271

271

608

265

CC

CC

AA

AB

BW

PX

Y

BZ

F

O

B

Passo Passo Step 06

4X

Diagram showing the assembly of the unit's frame. The main unit is labeled 608. The side panels are labeled 265 and 264. The top panels are labeled 264. The diagram shows the unit being assembled with screws (A) and washers (B) to secure the side panels to the main unit.

COBRIR OS PARAFUSOS
TAMPA ADESIVA
TAPA ADESIVA
STICKER
TAPA LOS TORNILLOS / COVER THE SCREWS

Passo Passo Step 07

Diagram showing the assembly of the unit's top cover. The main unit is labeled 277. The top cover is labeled 7011. The diagram shows the unit being assembled with nails (Y) and screws (P) to secure the top cover to the main unit.

DISTÂNCIA ENTRE CADA PREGO (Y): 120mm
 DISTANCIA ENTRE CADA CLAVO (Y): 120mm
 DISTANCE BETWEEN EACH NAIL (Y): 120mm

4X

30X




Diagram showing the assembly of the unit's top cover. The main unit is labeled 277. The top cover is labeled 7011. The diagram shows the unit being assembled with nails (Y) and screws (P) to secure the top cover to the main unit.

9


Ref.: MP4046 -14/Setembro/2023 - 52546 - Rev. 01

Passo
Step
04







DISTÂNCIA ENTRE CADA PREGO (Y): 120mm
DISTANCIA ENTRE CADA CLAVO (Y): 120mm
DISTANCE BETWEEN EACH NAIL (Y): 120mm

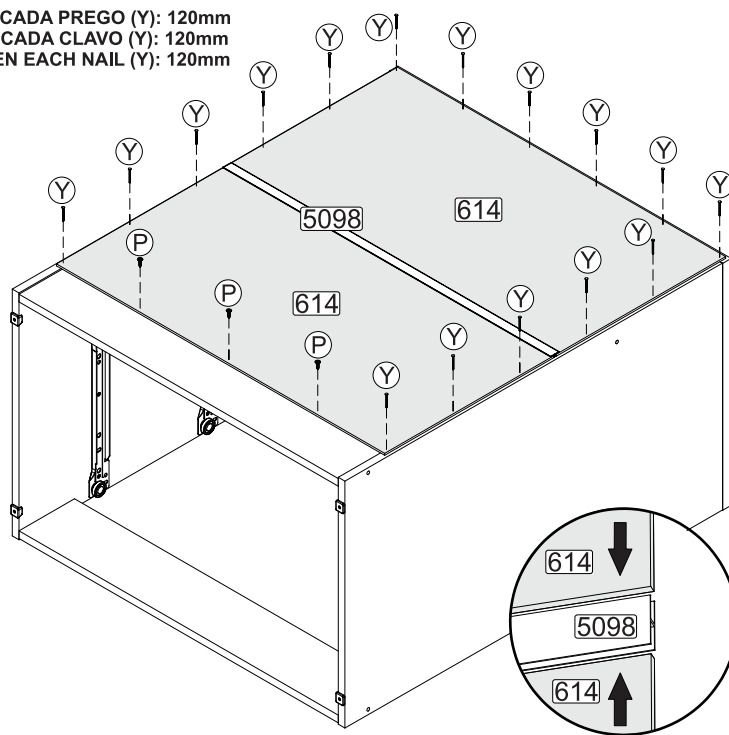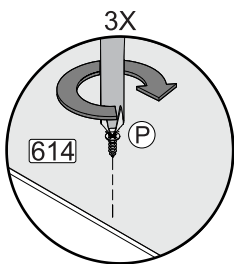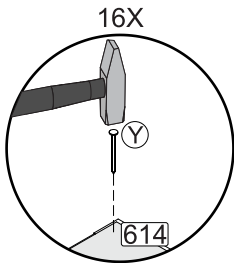





Passo
Step
05

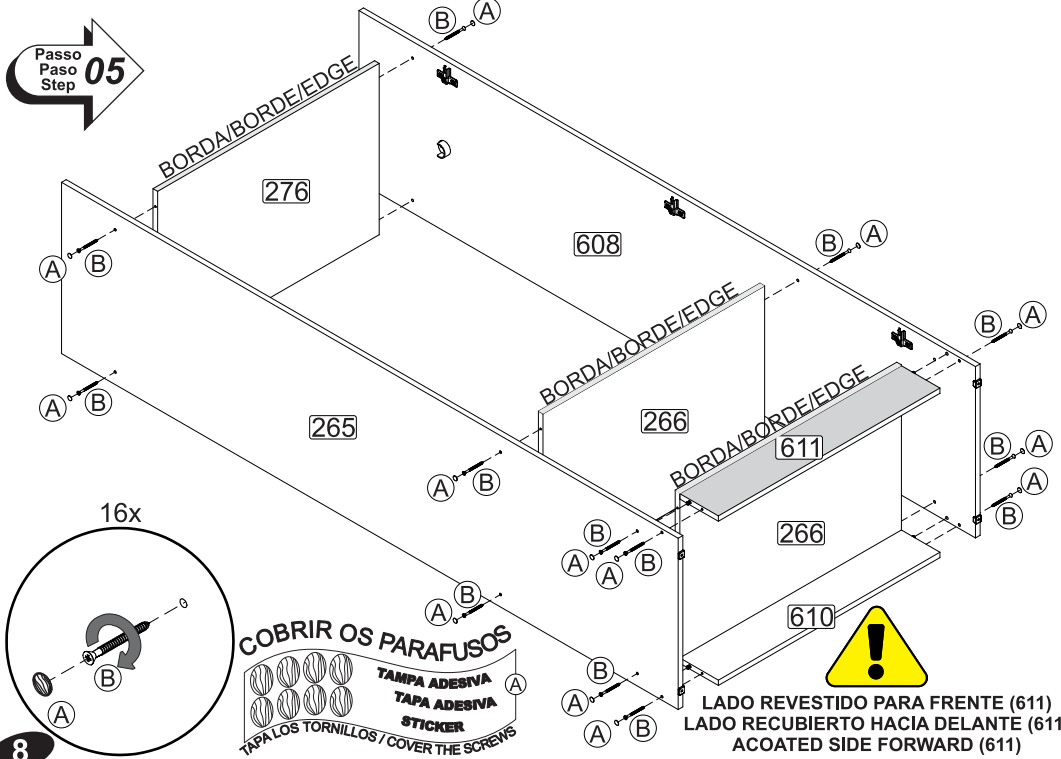

PRÉ-MONTAGEM / PRÉ-ARMADO / PRÉ-ASSEMBLAGE

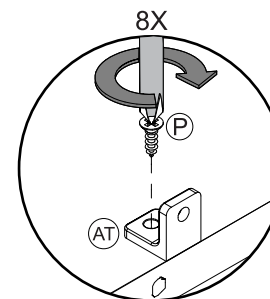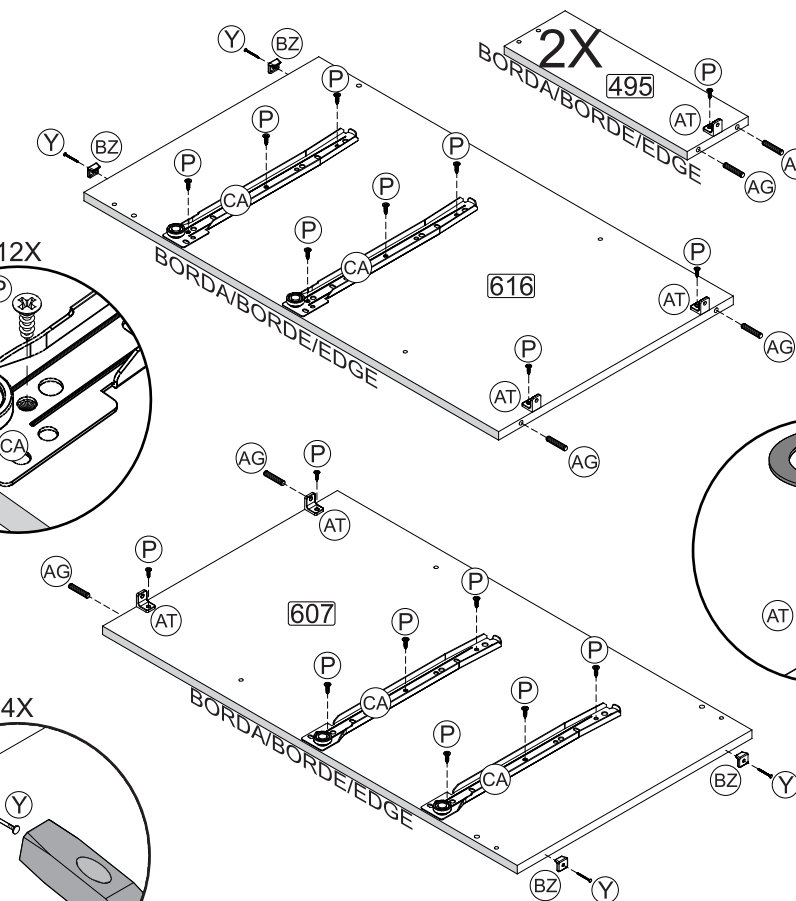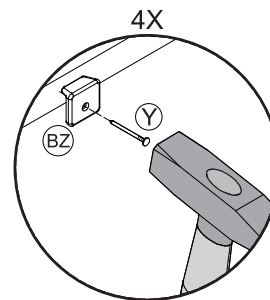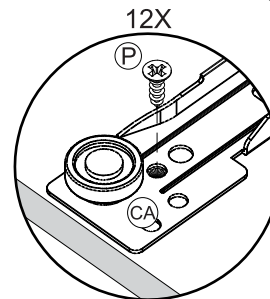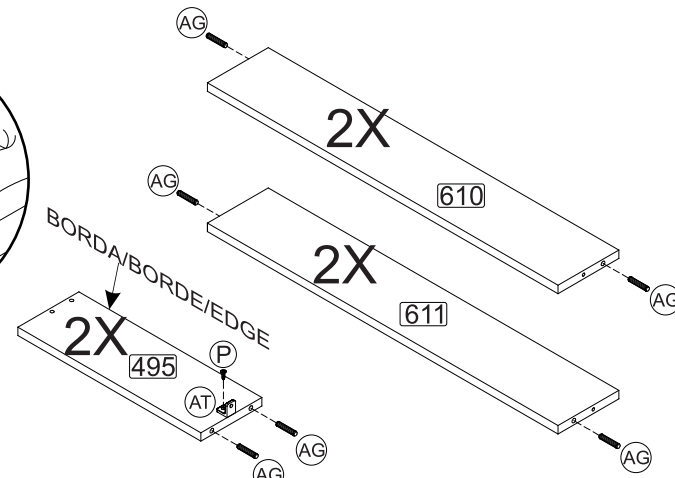
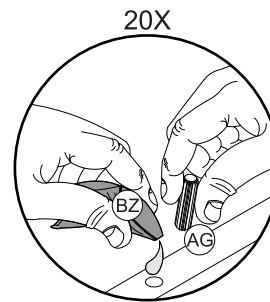


Passo
Paso
Step
01

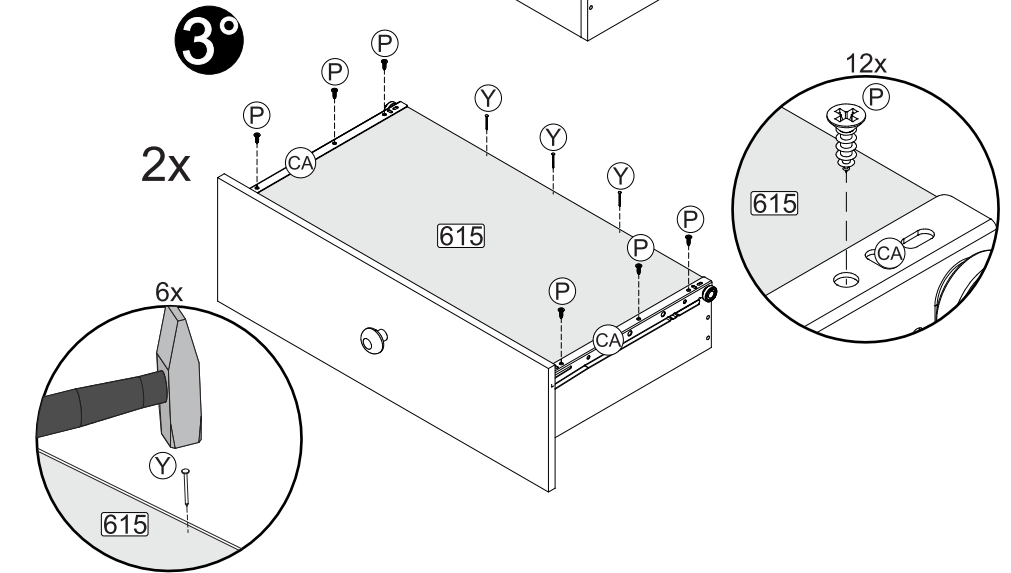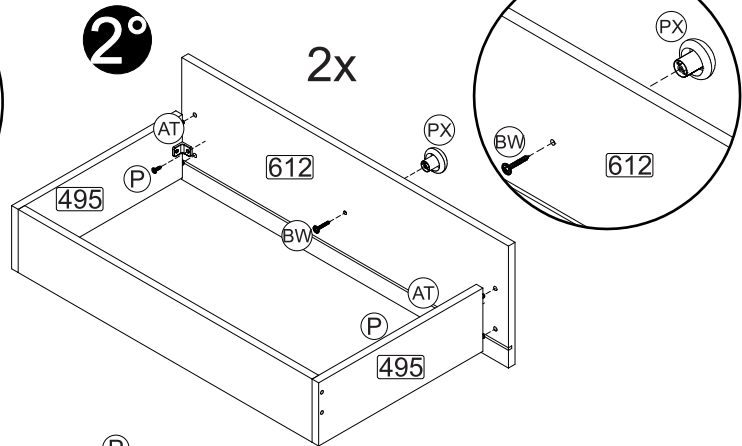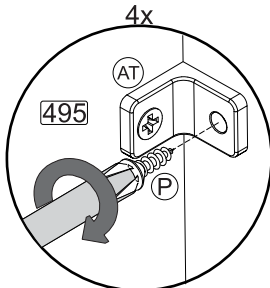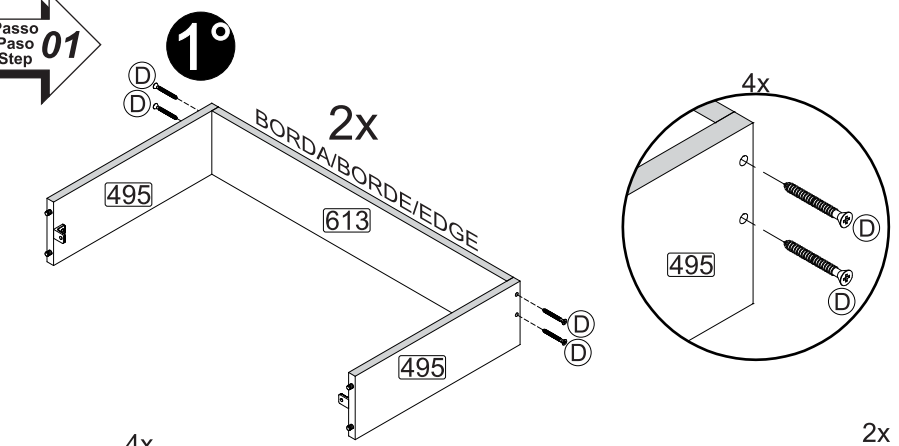

Passo
Paso
Step
02

COBRIR OS PARAFUSOS
TAMPA ADESIVA
TAPA ADESIVA
STICKER
TAPALOS TORNILLOS / COVER THE SCREWS

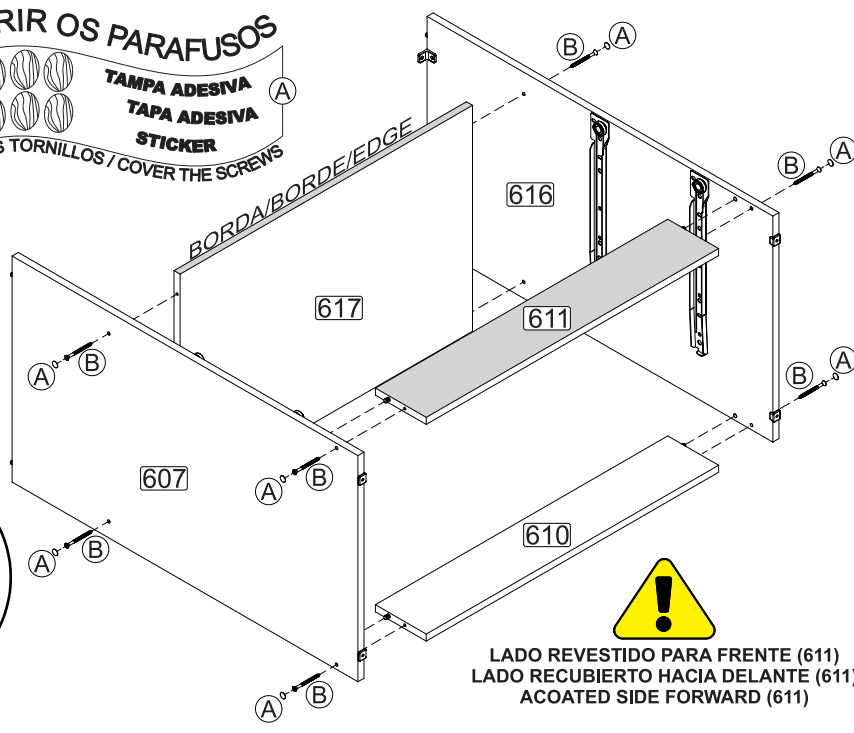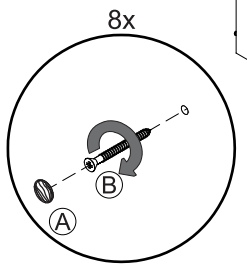

Passo
Paso
Step
03

