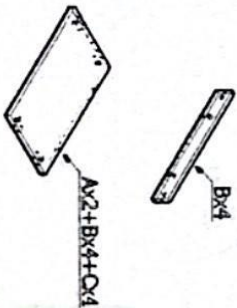
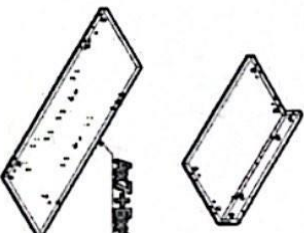
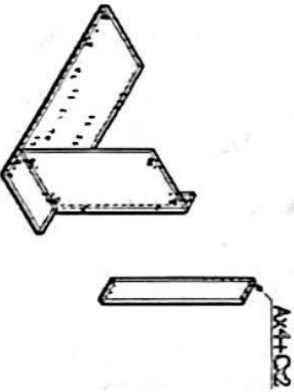
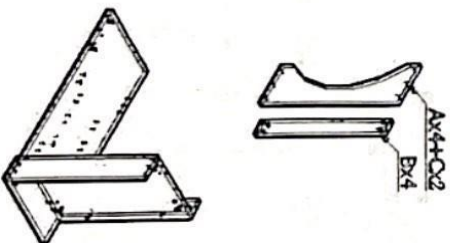


Floor-standing cabinet


1 OF 1

A		KD fitting (A)	24	step1:	step2:
B		KD fitting (B)	24	Ax2 Bx8 Cx4	Ax7 Bx4 Cx1 Hx2 Ix8 Ex4
C		Wood Shaw	10		
D		KD screw(48mm)	2		
E		Screw.M6x4	8		
F		Full overlay hinge	4		
G		Screw.M4x14	8		
H		Lamination bracket	4		
I		hole cover	16		
J		handle	2	step3:	step4:
K		handle screw	2	Ax4 Cx2	Ax4 Bx4 Cx2
					
					

Floor-standing cabinet


step5:

Bx4
Dx2

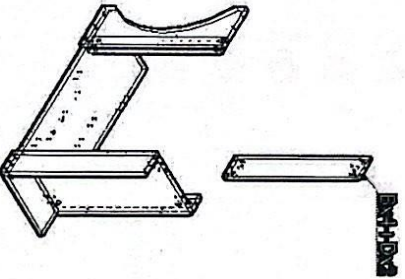


step6:

Ax7
Bx4
Cx1
Hx2
Ix8
Ex4

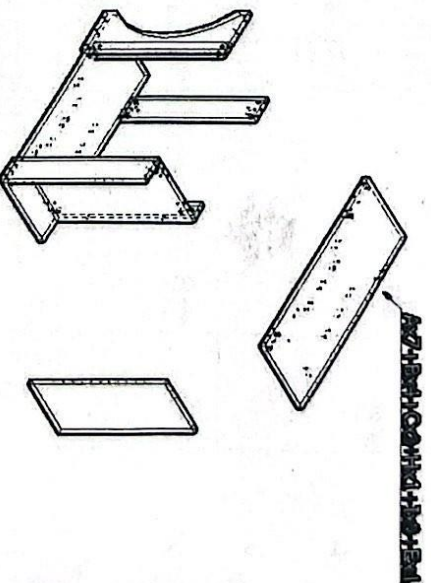

step7:

Fx4
Gx8
Jx2
Kx2

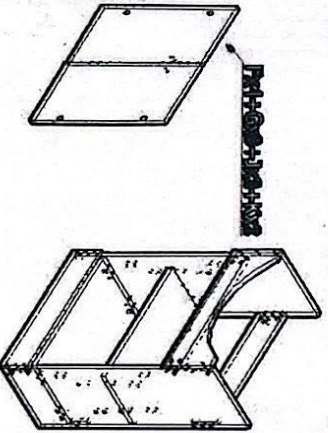

step8:

