

Computer desk A657A installation diagram

						
2.5CM flat head screws	1CM flat head screws	5.5CM flat head screws	7CM pointed head screws	3.5CM pointed head screws	Threading hole	Flange nut
* 8	B * 4	C * 4	E * 8	F * 2	G * 1	H * 2

Tips: Screw seven points tight during installation, and then tighten it after all is completed!

	
link	muffler
我 * 1	J * 8

Board name and serial number:

When installing, pay attention to distinguish the length of screws first and install screws in strict accordance with the drawings to avoid the top of the plate



support
① × 2



Perforated cross bar
② × 2



Desktop board
③



Footboard
④



Pedal back pull plate
⑤



Netting basket
⑥



Basket hook
⑦ × 2


Step 1: Complete partial installation



Pay attention to the hole in the front
support
(Two in total)



Desktop board

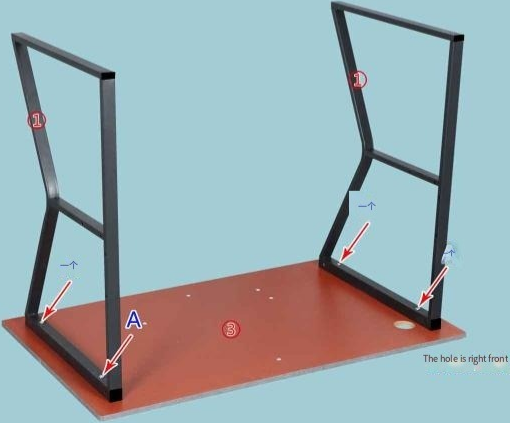

The hole is right front