



Instrucciones de Instalación
Codigo Easy: MUMUV630


VESSANTI
Baño & Cocina


Parts List:


No.	A (1PC)	B (1PC)	C (1PC)	
Foto Photo				

Herramientas No Incluidas / Tools Not Included

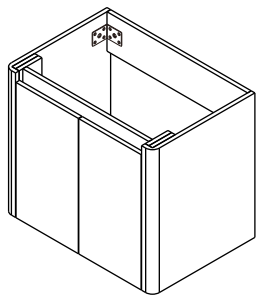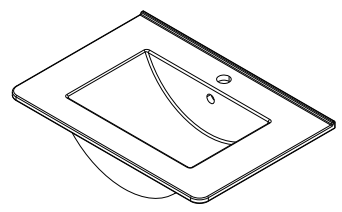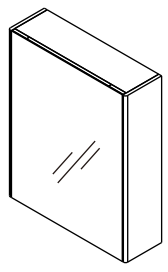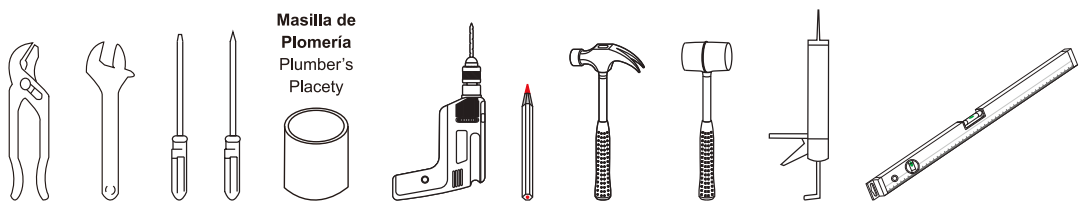


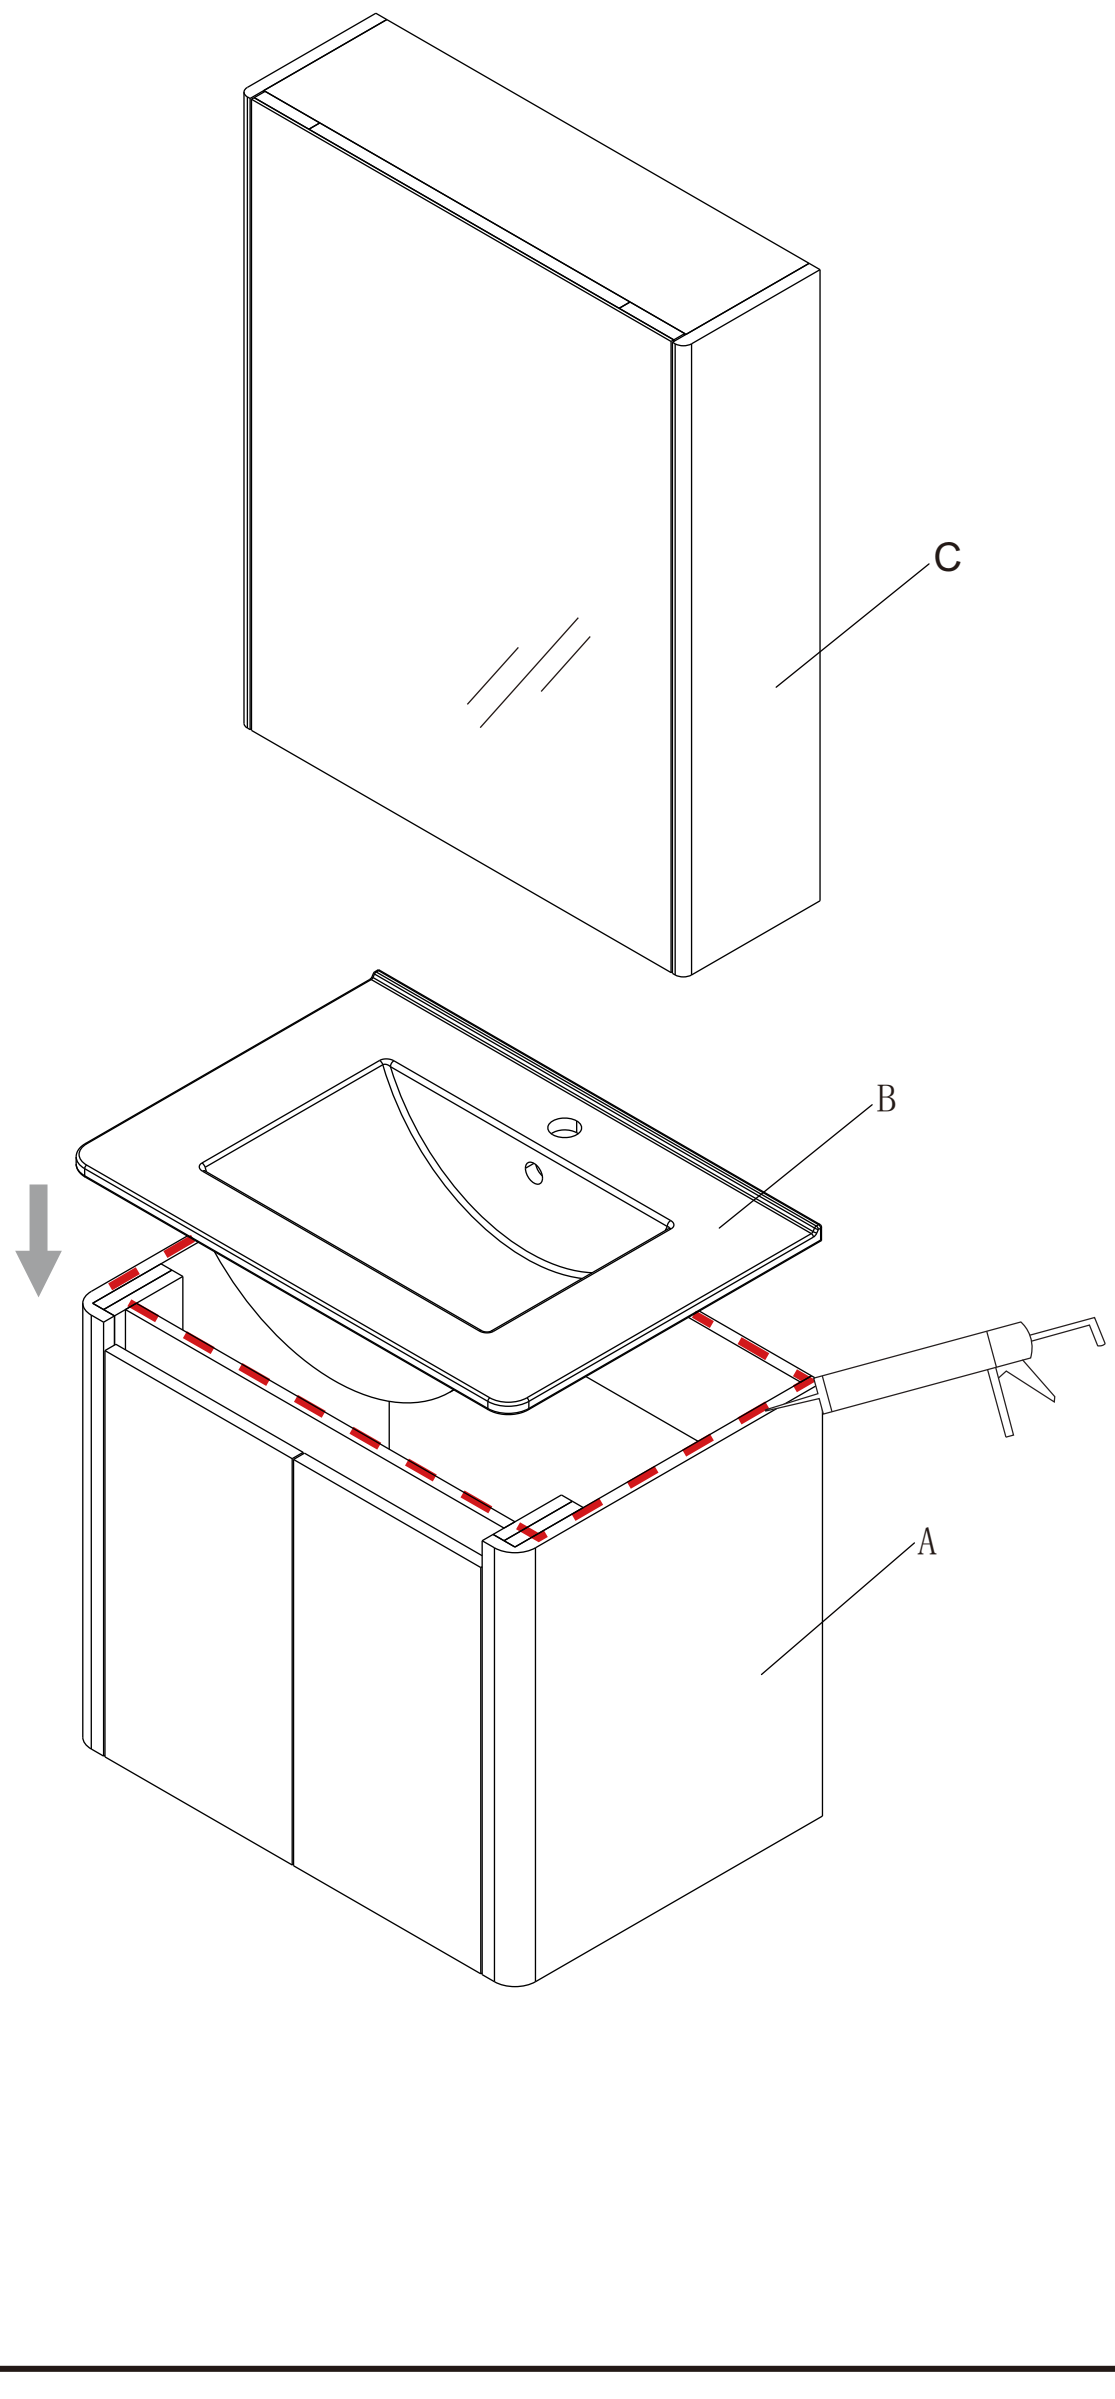







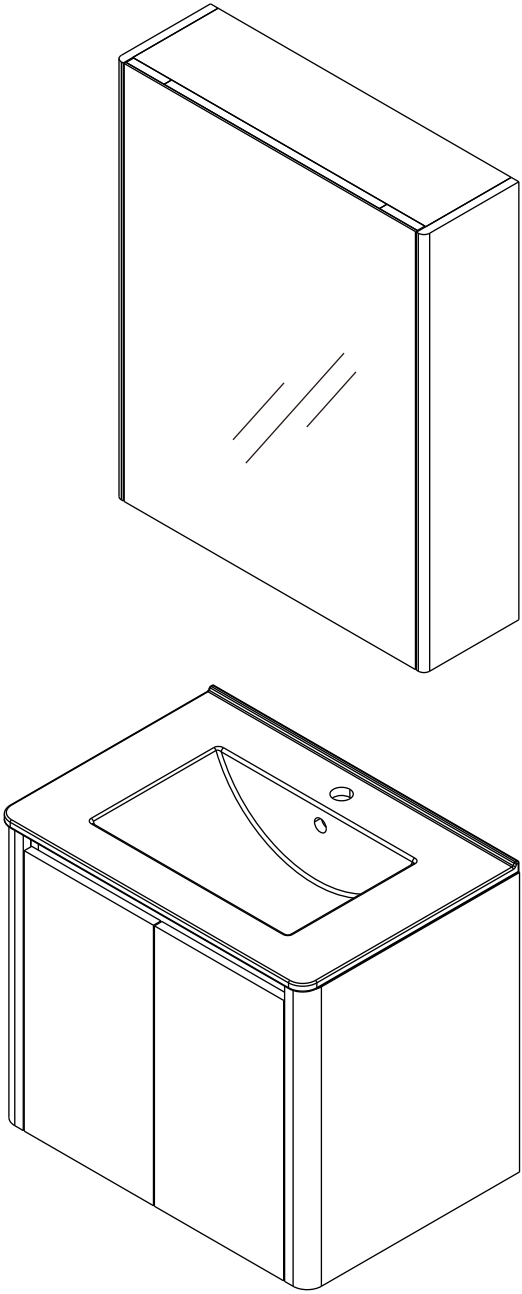



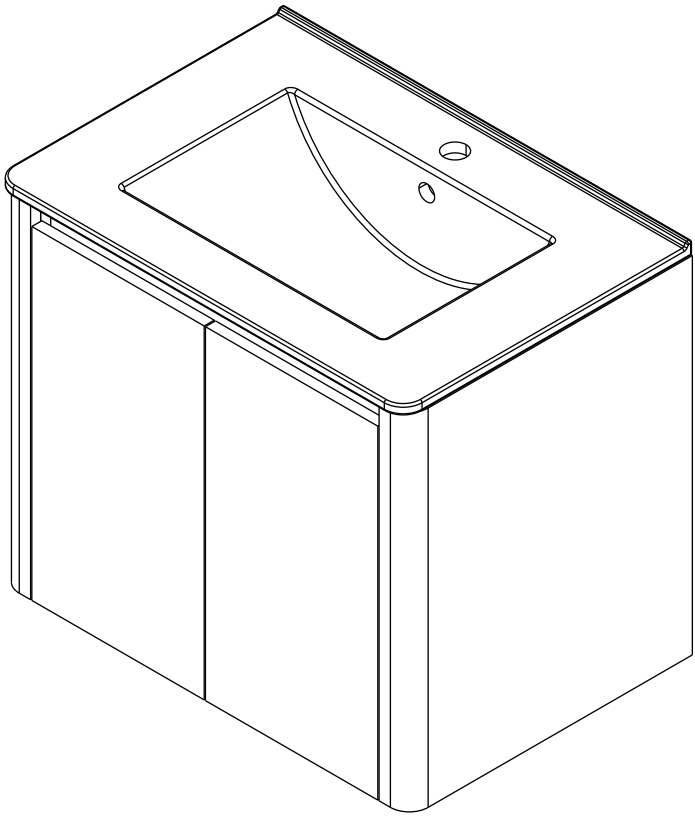


ASSEMBLY DIAGRAM

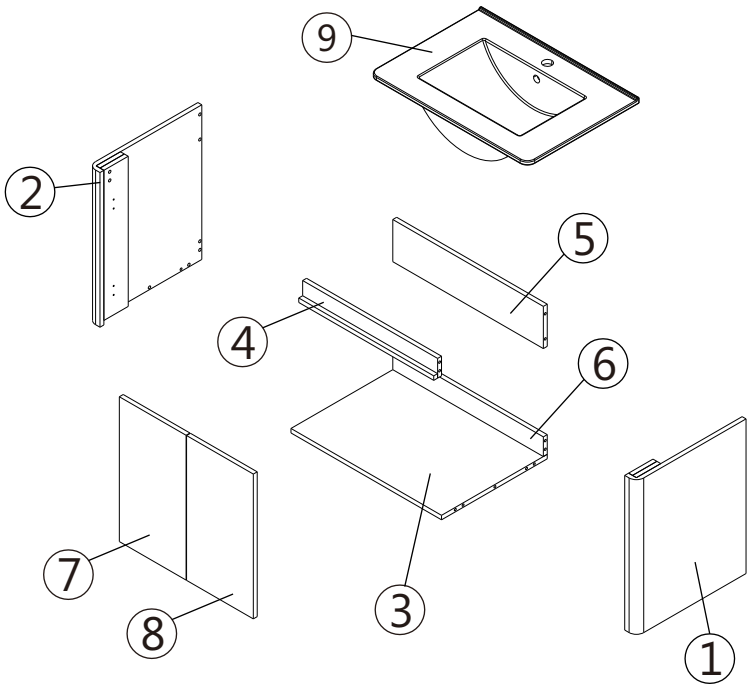


PARTS LIST

No.	Description	QTY	No.	Description	QTY
1		1	16		1
2		1	17		1
3		1			
4		1			
5		1			
6		1			
7		1			
8		1			
9		1			
10		1			
11		1			
12		1			
13		1			
14		1			
15		1			


Number	Picture	Qty
18		41
19		4
20		6
21		2
22		2
23		60
24		4


YOU MAY NEED (NOT SUPPLIED)

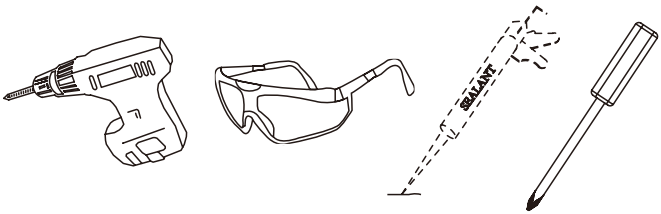


INSTALLATIONS

STEP 1


HARDWARE LIST		
18	1PCS	
18	1PCS	

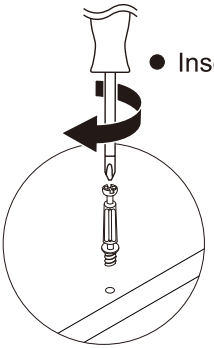


- Insert the Cam Screw into the shelves above.

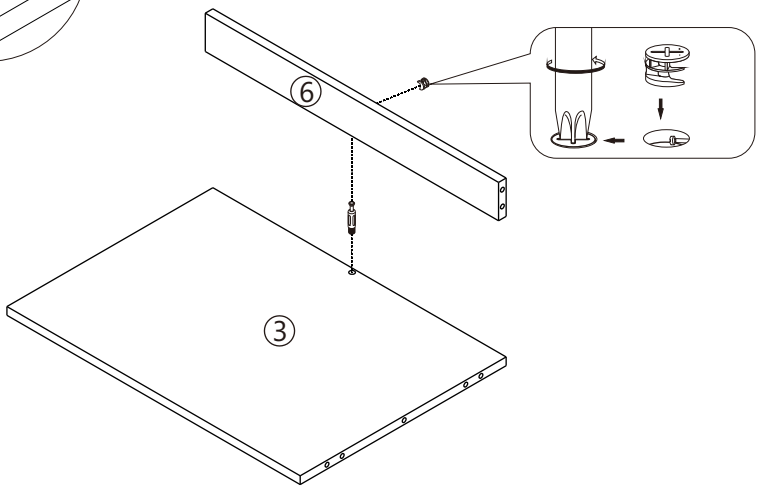



STEP 2

HARDWARE LIST		
18	18PCS	
18	18PCS	
19	4PCS	

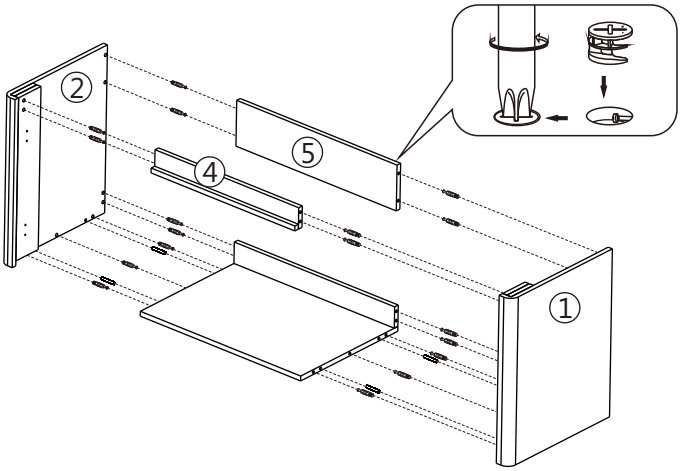



STEP 3


HARDWARE LIST		
20	4PCS	
23	8PCS	

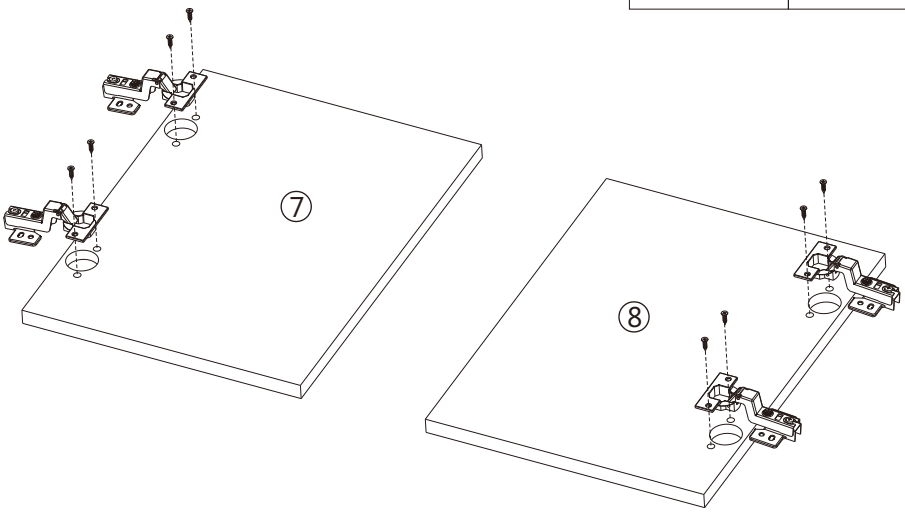


STEP 4


HARDWARE LIST	
23  16PCS	

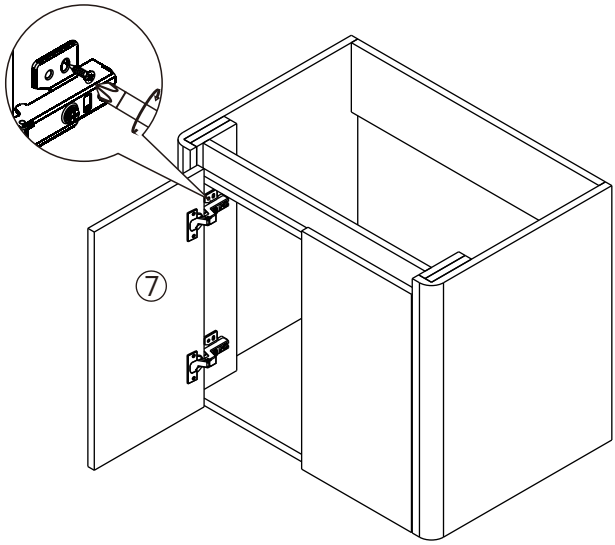


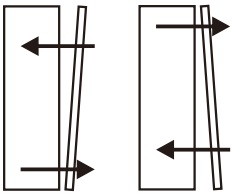

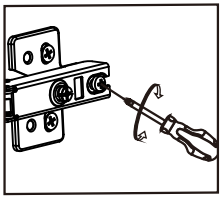



A.Depth adjustment

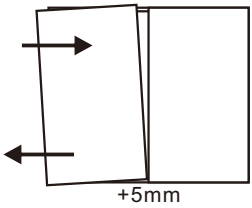

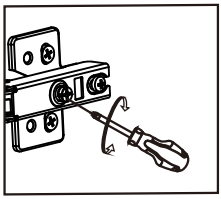


B.Side to side adjustment

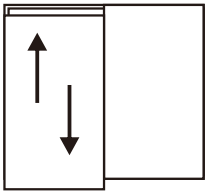


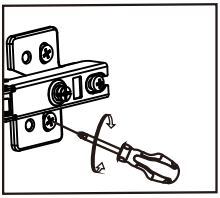


C.Height adjustment

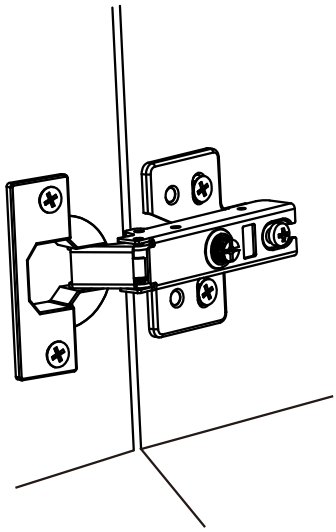



STEP 5

HARDWARE LIST	
22 2PCS	
23 8PCS	

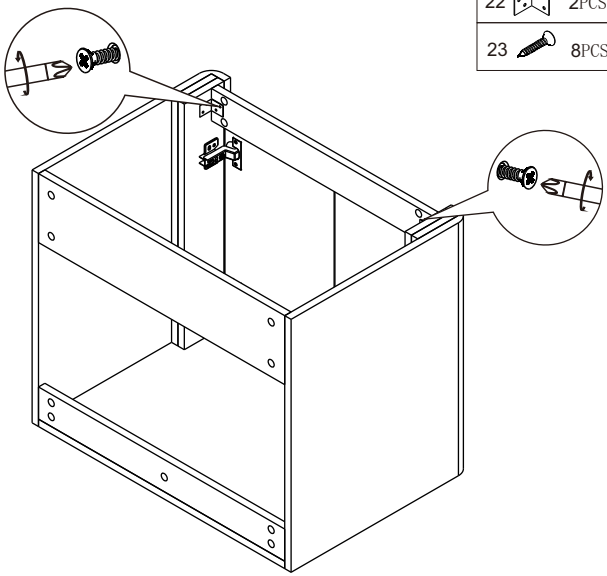


STEP 6


HARDWARE LIST	
21 2PCS	
23 16PCS	

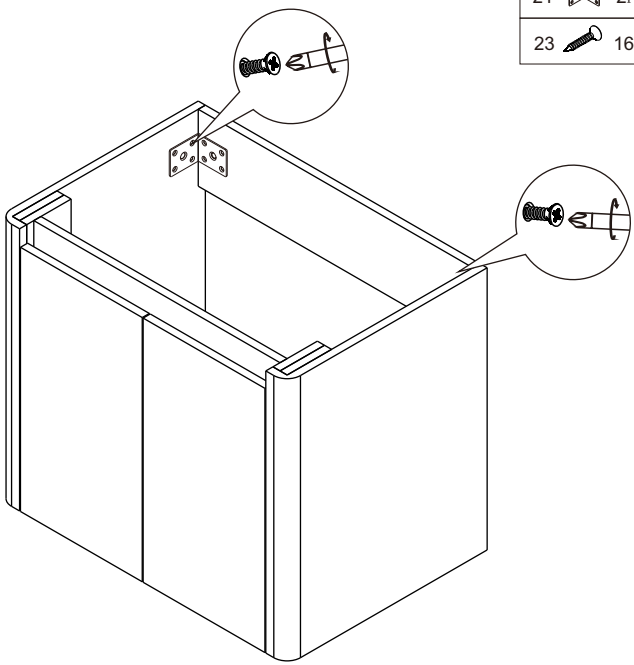


STEP 7


HARDWARE LIST		
21	2PCS	
21	2PCS	
9	1PCS	

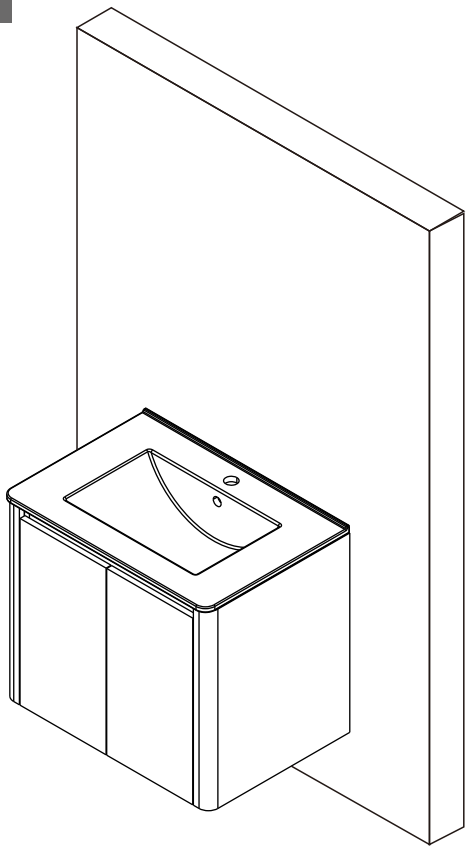

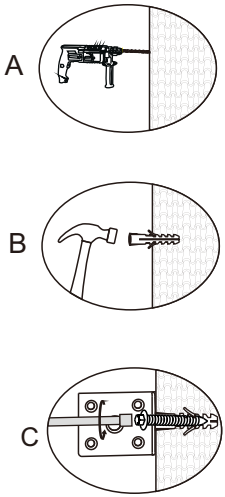


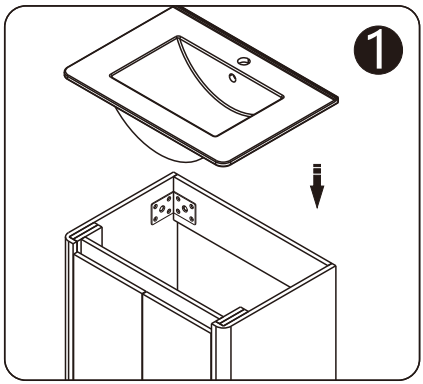


silicone transparent

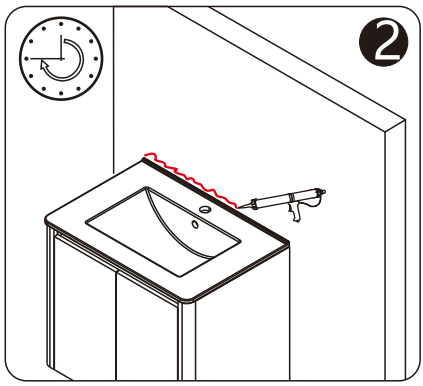


Install the basin on the cabinet with glue.
Put into use after 24 hours.

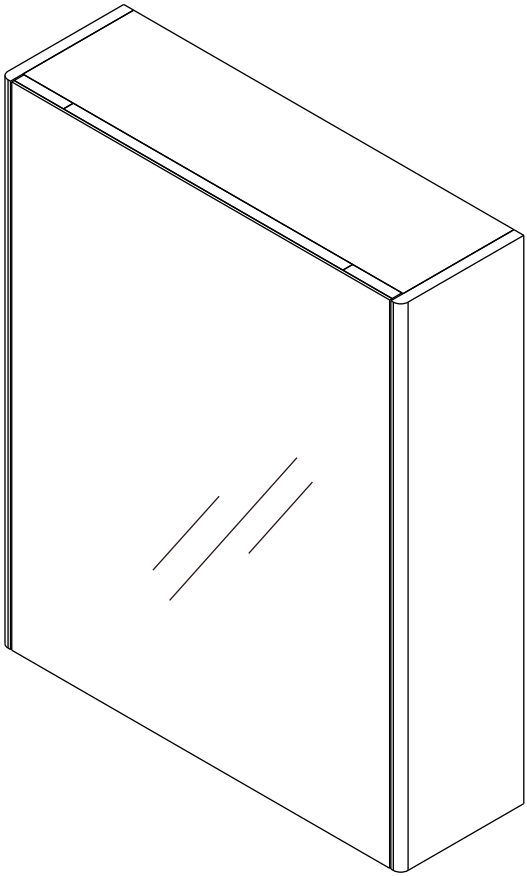

ASSEMBLY DIAGRAM

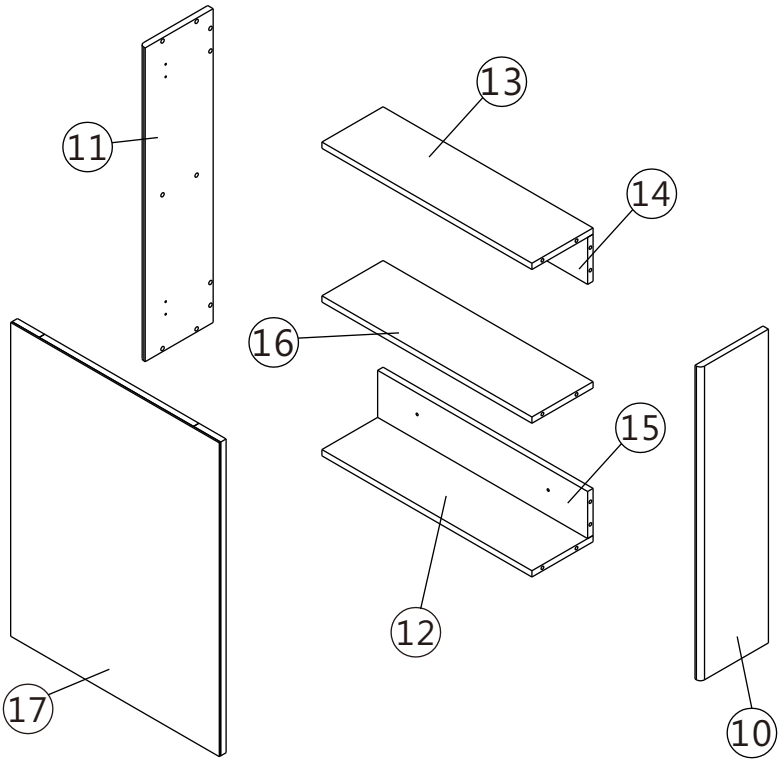



YOU MAY NEED (NOT SUPPLIED)

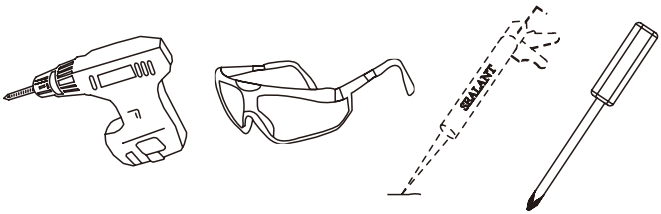


INSTALLATIONS


STEP 1

HARDWARE LIST		
18	2PCS	
18	2PCS	

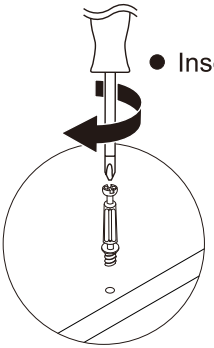



- Insert the Cam Screw into the shelves above.

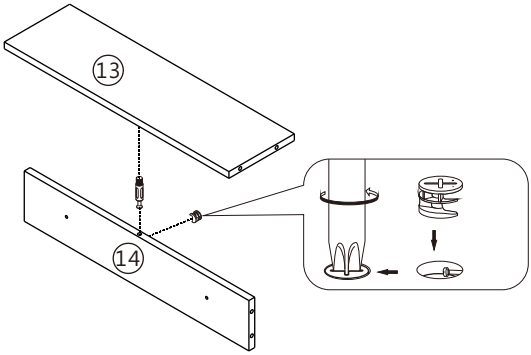

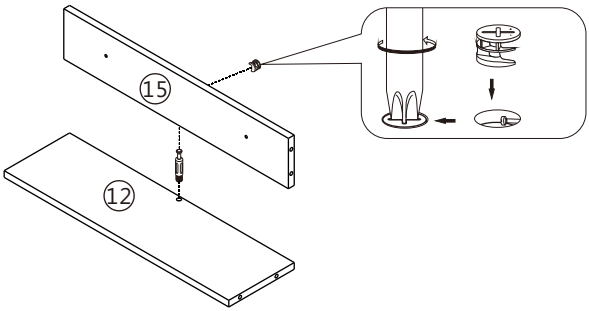



STEP 2

HARDWARE LIST	
18 20PCS	
18 20PCS	

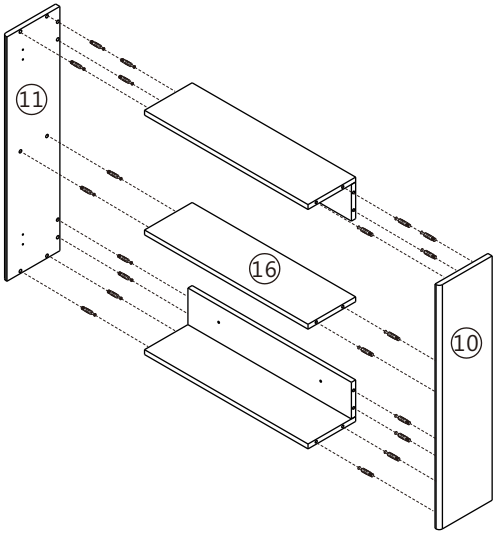


STEP 3


HARDWARE LIST	
20 2PCS	
23 4PCS	

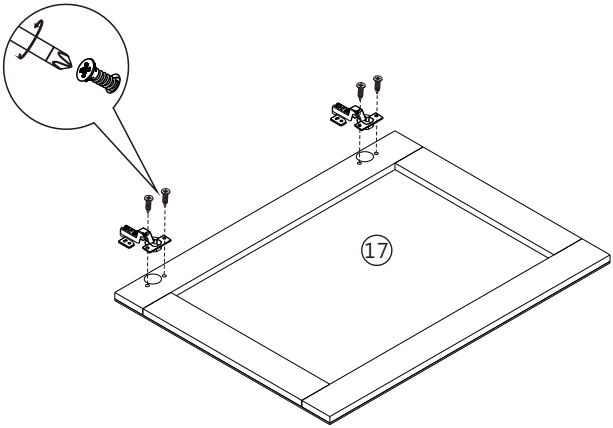


STEP 4


HARDWARE LIST	
23 8PCS	

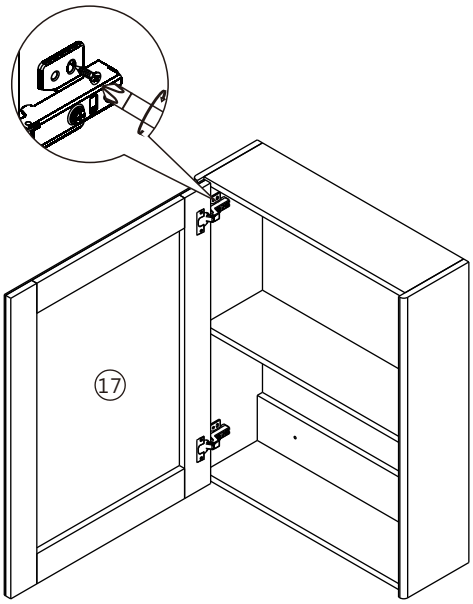


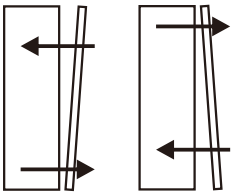

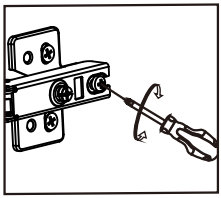



A.Depth adjustment

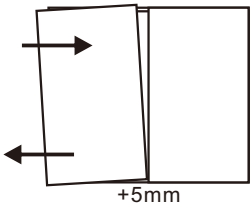

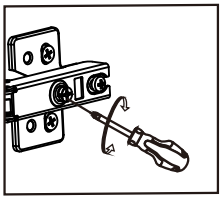


B.Side to side adjustment

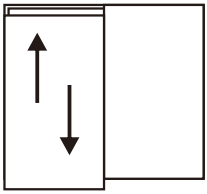

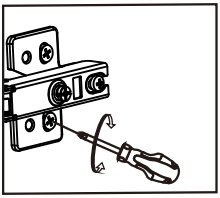


C.Height adjustment

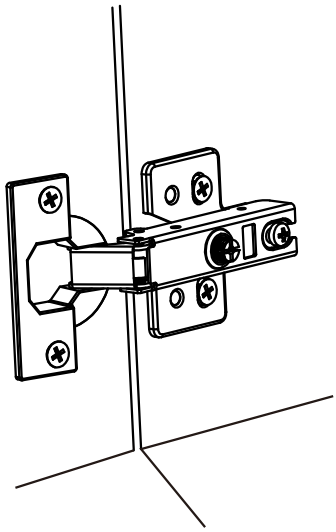


STEP 5


HARDWARE LIST		
24	4PCS	
24	4PCS	
24	4PCS	
24	4PCS	

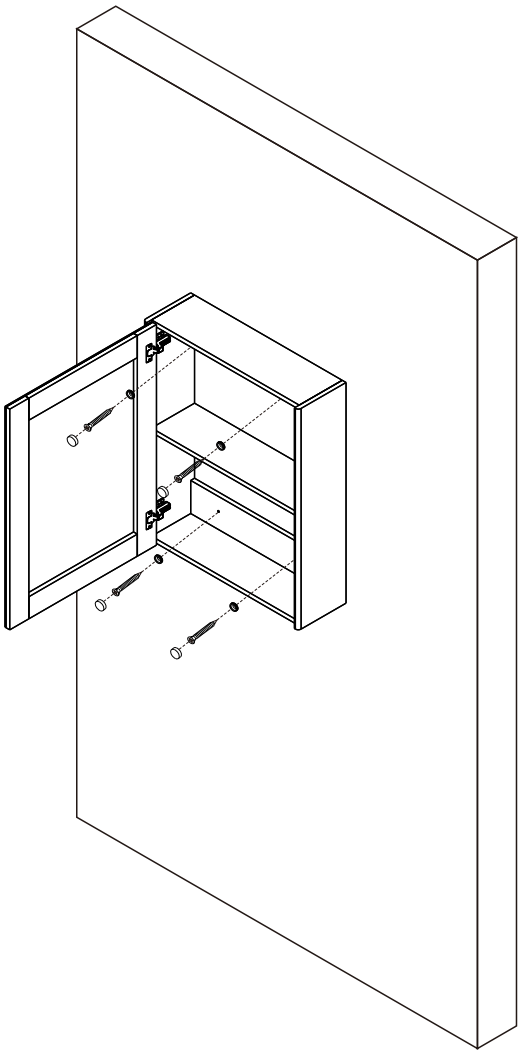


A

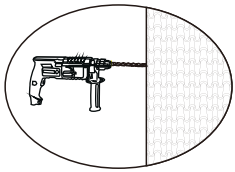

B

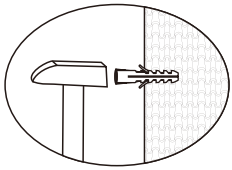

C

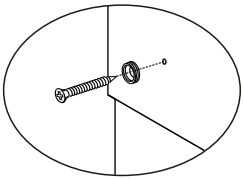

D

